 


Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

This document covers HDC*, MDC*, DEC*, MCHDC*, and CRC* models

STYLE 1

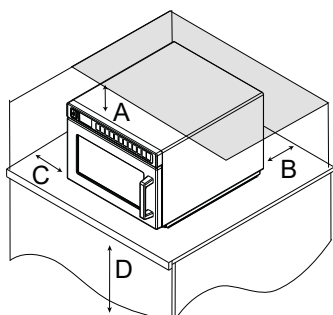

OVEN CLEARANCES

- Allow at least 2" (5.1 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.
- General market models:** There is not an installation clearance requirement for the back of the oven.
HDC21RB2, MCHDC21, HDC21DQ only: Allow at least 1" (2.54 cm) of clearance around back of oven.
- Allow at least 1" (2.54 cm) of clearance around sides of oven.
- Install oven so oven bottom is at least 3 feet (91.5 cm) above floor.

Preset Program Keypads

To cook food using preprogrammed cooking sequences:

 
- Open oven door, place food in oven, and close oven door.
- Press desired number keypad(s).
- Oven operates and time counts down.
- At the end of the cooking cycle, the oven beeps. Carefully remove food from oven.

X2 - DOUBLE QUANTITY COOKING

- Press and hold number keypad "5"/ X2 to toggle double quantity feature ON. "X2" appears at top center of screen when enabled.
- Press desired number keypad(s). Display counts down cooking time for two quantities.

MENU A/B (select models)

Press and hold number keypad "6" to toggle between A and B menus.

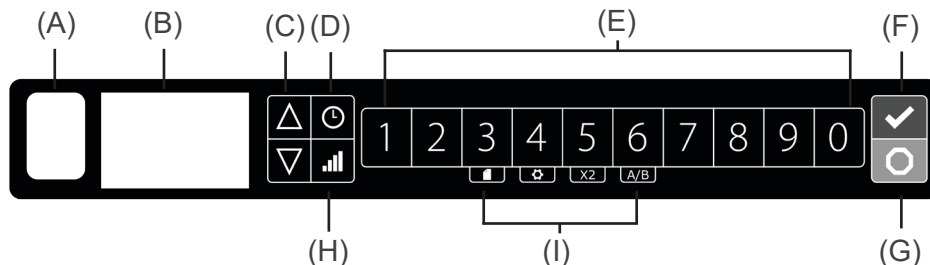

Control Panel Features

- USB Port
- Display
- Up and Down Arrows
- Time Select Keypad
- Number Keypads
- Start Keypad
- Stop/Reset Keypad
- Power Level Select Keypads

(I) Secondary Function Keypads

To activate, press and hold corresponding number keypad for 1 second.

- Programming Mode** (keypad "3")
- User Options** (keypad "4")
- X2 - Double Quantity Cooking** (keypad "5")
- Menu A/B** (keypad "6")

So...how do I use it?

Manual Time Entry Mode

Time entry mode allows the user to manually enter cook time and power level, without changing the preset program keypads.

- Open oven door, place food in oven, and close door
 - READY screen is displayed. Fan and light operate
 - If keypad is not pressed within 60 seconds, open and close oven door again
- Press the clock icon/ TIME ENTRY
 - MANUAL COOK screen is displayed
- Press number keypads to enter desired cook time
- Press the power level icon to change power level.
 - Press number keypads to enter % microwave power ("1"=10%, "2"=20%, etc.)
- Press START/OK keypad to begin cooking
 - Oven operates and display counts down cooking time
- At the end of the cooking cycle, the oven beeps. Carefully remove food from oven

Programming Mode

- Press and hold number keypad "3"/ PROGRAM
- Press number keypad(s) to open the desired program location
- To edit name:** Press up arrow
- To edit cook time for Stage One:** Press down arrow or clock icon.
- To edit power level for Stage One:** Press down arrow or power level icon.
- To save and exit programming mode:** Press START/OK keypad

Access and Modify User Options

- Press and hold keypad number "4"/ USER OPTIONS.
If prompted, enter the PIN Code and press START/OK keypad
- Press up and down arrows to scroll through pages of user options
- To access an individual user option, press the corresponding number keypad
 - To change the setting, press corresponding number keypad
 - To return to User Options Menu, press START or STOP/RESET
- Press STOP/RESET keypad to exit User Options Menu


STYLE 2

CONTROL PANEL FEATURES

- (A) USB Port
- (B) Display
- (C) Number Keypads
- (D) Start/ OK Keypad
- (E) Stop/ Reset Keypad

- (F) **Secondary Function Keypads**
To activate, press and hold corresponding number keypad.

 - (i) **Manual Time Entry Mode** (keypad "1")
- (ii) **Power Level** (keypad "2")
- (iii) **Programming Mode** (keypad "3")
- (iv) **User Options** (number keypad "4")
- (v) **X2 - Double Quantity Cooking** (keypad "5")
- (vi) **Menu A/B** (keypad "6")

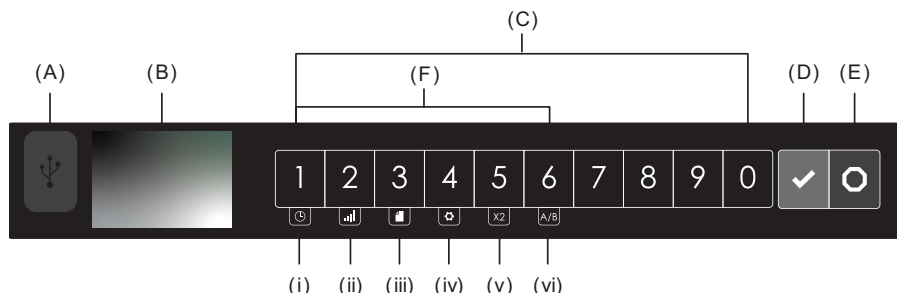

So...how do I use it?

Preset Program Keypads

To cook food using preprogrammed cooking sequences:

1. Open oven door, place food in oven, and close oven door.
2. Press desired number keypad(s).
3. Oven operates and time counts down.
4. At the end of the cooking cycle, the oven beeps. Carefully remove food from oven.

X2 - DOUBLE QUANTITY COOKING

1. Press and hold number keypad "5"/ X2 to toggle double quantity feature ON. "X2" appears at top center of screen when enabled.
2. Press desired number keypad(s). Display counts down cooking time for two quantities.

MENU A/B (select models)

Press and hold number keypad "6" to toggle between A and B menus.

Manual Time Entry Mode

Time entry mode allows the user to manually enter cook time and power level, without changing the preset program keypads.

1. Open oven door, place food in oven, and close door.
2. Press and hold number keypad "1"/ TIME ENTRY.
3. Press number keypads to enter desired cook time.
4. Press and hold number keypad "2"/ POWER LEVEL to change power level.
 - Press number keypads to enter % microwave power ("1"=10%, "2"=20%,etc.)
 - For 100% power level, press and hold number keypad "2"/ POWER LEVEL.
5. Press START/OK keypad to begin cooking.
6. At the end of the cooking cycle, the oven beeps. Carefully remove food from oven.

 
Programming Mode

1. Press and hold number keypad "3"/ PROGRAM.
2. Press number keypad(s) to open the desired program location.
3. **To edit name:** Press number keypad "0". Press number keypads to enter recipe name. Press START/OK keypad.
4. **To edit cook time for Stage One:** Press number keypad "1". Press number keypads to enter cook time. Press START/OK keypad.
5. **To edit power level for Stage One:** Press number keypad "5". Press number keypads to enter % microwave power ("1"=10%, "2"=20%,etc.). For 100% power level, press and hold number keypad "2"/ POWER LEVEL.
6. If stage cooking is desired, repeat steps 4-5 for each additional stage, substituting corresponding number keypads for each stage.
7. **To save and exit programming mode:** Press START/OK keypad.


The switching operation of this microwave oven can cause voltage fluctuations on the supply line. The operation of this oven under unfavorable voltage supply conditions can have adverse effects. This device is intended for the connection to a power supply system with a maximum permissible system impedance Z_{max} of 0.31 Ohms at the interface point of the user's supply. The user has to ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

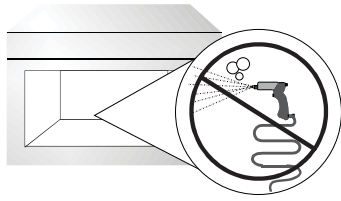

DO NOT power spray

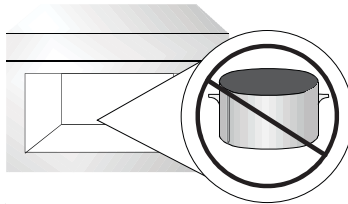 

No metal pans

Refer to Owner's Manual for complete care and cleaning instructions.

⚠ Do NOT use abrasive cleaners or cleaners containing ammonia, citrus, phosphates, chlorine, sodium or potassium hydroxide (lye).
Use of unapproved cleaning agents will void the terms of the warranty.

Access and Modify User Options

There are several options you can change to customize the operation of the oven for your business. Options are shown below. **The factory setting is shown in bold type.**

1. Press and hold keypad number "4"/ USER OPTIONS.
If prompted, enter the PIN Code and press START/OK keypad
2. Press the START/OK keypad to scroll through pages of user options
3. To access an individual user option, press the corresponding number keypad
 - To change the setting, press corresponding number keypad
 - To return to User Options Menu, press START or STOP/RESET
4. Press STOP/RESET keypad to exit User Options Menu

STANDARD DEFAULT PER MODEL (FACTORY SETTINGS IN BOLD)

Factory setting may vary by model

SETTING	DISPLAYED OPTIONS	DESCRIPTION
End of Cycle Beep	3 Seconds Continuous Burst	3 second continuous beep Continuous beep until door is opened 5 beep bursts until door is open
Speaker Volume	Low, Medium, High	Sets the speaker volume to the selected option
Key Beep	On Off	Allows beep when keypad is pressed Prevents beep when keypad is pressed
Reset on Door Open	End Cook Cycle Pause Cook Cycle	Cancels heating time count down after door is opened during cycle. Allows oven to resume heating time countdown after door is opened during cycle
Digit Entry	Single Digit Double Digit Folders	Allows 10 (0-9) preprogrammed items Allows 100 (00-99) preprogrammed items Allows 10 folders (0-9), each with 10 preprogrammed items
Manual Programming	On Off	Allows use of manual time entry and preprogrammed keypads Allows use of preprogrammed keypads only
Time Entry	On Off	Manual time entry/cooking allowed Manual time entry/cooking not allowed
Maximum Cook Time	10, 60 minutes	Allows a maximum cook time corresponding to the selected option
Keypad Enable Window	15, 30 seconds, 1, 2 minutes	Length of time after oven door is closed that a cook can be started
On-the-Fly Cooking	On Off	Allows pushing additional keypads to add or change time in the middle of a cook cycle Disables pushing any additional keypads during a cook cycle
Quantity Prompt*	On Off	Prompts the user for portion quantity multiplier (1-9) upon selecting a preset program Allows user to cook individual portions and/or use X2 quantity multiplier feature
A/B Menu*	Off Default to Menu A Default to Menu B	A/B Menu is not used Menu A displayed by default Menu B displayed by default
PIN Code	Off On Set PIN Code	PIN Code not required to access User Options PIN Code required to access User Options PIN Code required. Create new 4 digit PIN Code
Language	Bengali, Chinese (Mandarin), Danish, Dutch, English , Filipino, French, German, Greek, Hindi, Italian, Japanese, Korean, Laotian, Norwegian, Polish, Portuguese, Romanian, Russian, Spanish, Swedish, Thai, Ukrainian, Vietnamese	
Load Recipe File	N/A	Detects USB flash drive and imports .xml format menu file
Clean Filter Reminder	Off, Every 7, 30 or 90 Days	Sets interval for the Clean Filter reminder
Load Logo	N/A	Detects USB flash drive and imports .bmp logo file. Must be in 320x240 resolution and 16 bit (R5 G6 B5) color depth
Reset Logo	N/A	Erases a user loaded Logo and resets to the factory loaded Logo

* Available on select models only (only displayed in User Options menu if factory option is enabled)